



User's Manual  
Part 2

## 5.8 GHz Cordless Telephone 5870 with Talking Caller ID/Call Waiting



For Customer Service Or Product  
Information, Visit Our Website At  
[www.telephones.att.com](http://www.telephones.att.com)

Please also read  
**Part 1 — Important  
Product Information**



Visit us at [www.telephones.att.com](http://www.telephones.att.com)

© 2003 Advanced American Telephones.  
All Rights Reserved.  
AT&T and the Globe Design are  
trademarks of AT&T Corp., licensed to  
Advanced American Telephones.  
Printed in China. Issue IAT&T 05/03

# CONTENTS


<b>BEFORE YOU BEGIN .....</b>	<b>1</b>	<b>PHONE BOOK .....</b>	<b>38</b>
Parts List.....	1	Store a Number and Name in	
About Caller Identification		Phone Book .....	38
(Caller ID) .....	2	Keypad Characters.....	39
About the Calls Log .....	2	Dial a Number in Phone Book.....	40
About Adding Handsets.....	2	Edit a Number/Name in	
<b>INSTALLATION.....</b>	<b>3</b>	Phone Book .....	41
Table/Desktop Installation.....	3	Delete a Number/Name in	
About Handset Registration.....	5	Phone Book .....	42
Register an Additional Handset		<b>CALLER ID OPERATION.....</b>	<b>43</b>
(Model 5800 Handset).....	5	Setup Talking Caller ID .....	44
Wall Installation .....	6	Record a New Talking Caller ID	
Spare Battery/		Announcement.....	45
Power Failure Backup.....	7	Edit Talking Caller ID	
Belt Clip.....	8	Announcement.....	46
Headset.....	8	Review, Play, Erase Talking	
<b>FEATURE SETUP – HANDSET 9</b>		Caller ID Announcement.....	47
Feature Setup Menu.....	9	Review Calls Log.....	48
Set Time.....	9	Store Record in Phone book.....	48
Clock Mode.....	10	Display Dial.....	49
Sound Select.....	11	<b>Answering system operation</b>	
Ringer Volume .....	12	<b>AT THE BASE .....</b>	<b>50</b>
Ringer Melody.....	13	Audible Indicators.....	50
Vibrate Control.....	14	Turn Answering system On/Off.....	50
Low Batt Tone.....	15	Set the Clock.....	50
Range Tone.....	16	About Mailboxes .....	51
Keypad Tone .....	17	About Announcements.....	51
Set Contrast.....	18	Record Your Announcement.....	52
Language Setting.....	19	Answering System Feature Setup.....	53
<b>FEATURE SETUP – BASE.....</b>	<b>20</b>	Feature Summary .....	54
Ringer Volume .....	20	Listen to, Save&Delete Messages.....	55
Ringer Melody.....	21	Adjust Playback Volume.....	56
Dial Mode (Tone/Pulse).....	22	Call Screening/Intercept.....	56
<b>TELEPHONE OPERATION ..</b>	<b>23</b>	Record a Memo .....	57
Make a Call .....	23	Message Window Display .....	58
Answer a Call .....	23	<b>Answering system operation</b>	
Volume.....	24	<b>AT TOUCH TONE PHONE .....</b>	<b>59</b>
Handset Speakerphone.....	25	Connect with the	
Redial .....	26	Answering System .....	59
Flash/Call Waiting.....	27	Voice Menu .....	59
Mute .....	28	Remote Access Commands.....	60
Hold .....	29	<b>BATTERIES .....</b>	<b>61</b>
Temporary Tone Dialing .....	30	Battery Life.....	61
Display Screen Messages .....	31	Battery Indicator .....	61
Handset Icons .....	32	Charge the Handset	
Base Lights.....	33	Battery Pack .....	61
Tones and What They Mean .....	33	Spare Battery/	
<b>INTERCOM OPERATION.....</b>	<b>34</b>	Power Failure Backup .....	62
Intercom Calls .....	34	Replace the Handset Battery Pack ...	63
Answering Intercom.....	35	<b>IN CASE OF DIFFICULTY ....</b>	<b>64</b>
End Intercom .....	35	Phone.....	65
To Answer an Incoming Call		Caller ID .....	67
while intercomming.....	35	Answering System.....	68
Blind Call Transfer .....	36	<b>DEFAULT SETTINGS.....</b>	<b>70</b>
Announced Call Transfer.....	36	<b>TECHNICAL SPECIFICATIONS</b>	<b>71</b>
Conference Calling.....	37	<b>INDEX.....</b>	<b>72</b>

## BEFORE YOU BEGIN

### Parts List

Your box should include:


**BEFORE YOU BEGIN**

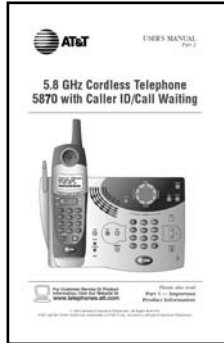

This User's Manual



Quick Start Guide

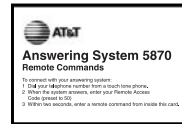

Wallet Card



Belt Clip



 
Base Unit




Handset




NiMH Battery Pack




Long Telephone Line Cord

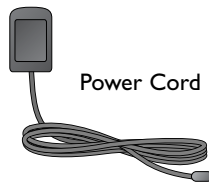

Power Cord

 

Short Telephone Line Cord

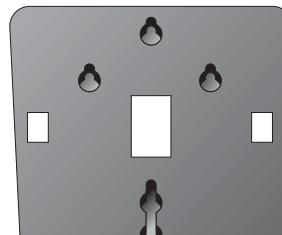

Wall Mounting Bracket

## About Caller Identification (Caller ID)

This product has a Caller ID with Call Waiting feature that works with service from your local phone service provider.

Caller ID with Call Waiting lets you see who's calling before you answer the phone, even when you're on another call.

You may need to change your phone service to use this feature.

Contact your phone service provider if:

- You have both Caller ID and Call Waiting, but as separate services (you may need combined service)
- You have only Caller ID service, or only Call Waiting service
- You don't subscribe to any Caller ID or Call Waiting services.

You can use this product with regular Caller ID service, and you can use this product's other features without subscribing to either Caller ID or combined Caller ID with Call Waiting service.

There are fees for Caller ID services, and they may not be available in all areas.

This product can provide information only if both you and the caller are in areas offering Caller ID service, and if both telephone companies use compatible equipment.

## About the Calls Log

This phone assigns each incoming call a number from 1 to 50 at the handset. The most recent call will have the lowest number. When the memory is full, the oldest call information is deleted to make room for new incoming call information. See CALLER ID OPERATION, beginning on page 43, for more details.

If you answer a call before call information appears on the screen, it will not appear in the calls log.

## About Adding Handsets

This product is compatible with the AT&T 5800 Expansion Handset. You may add up to five additional 5800 units (purchased separately) to this phone. Follow the instructions provided with the additional handset(s) for installation and registration.

Ⓢ **NOTE:** Although you can register up to six handsets, only four can be used at one time.

## INSTALLATION


### Table/Desktop Installation


Ⓢ **NOTE:** Install this telephone away from electronic equipment, such as personal computers, television sets or microwave ovens. Avoid excessive heat, cold, dust or moisture.

**1 Connect the telephone line cord.**


**2 Connect the power cord.**

The ON/OFF light goes on, and CL flashes in the Message Window.

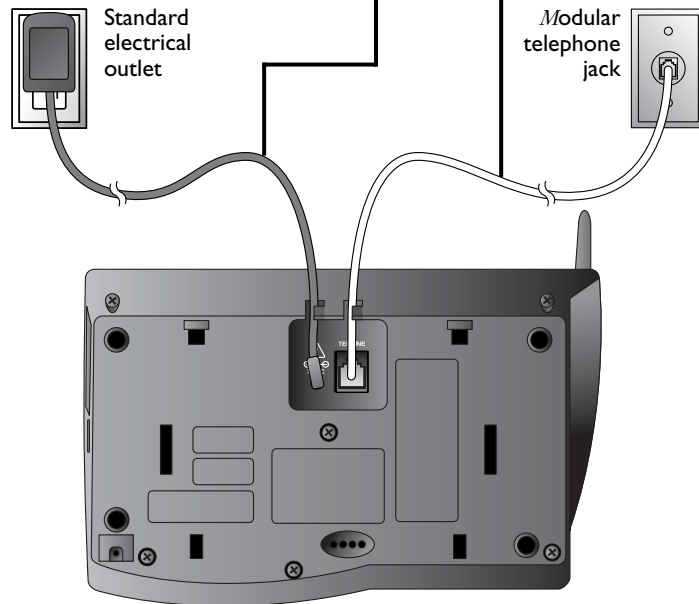

 Use only the power cord supplied with this product. If you need a replacement, call 1-800-222-3111.

- 3 Install the handset battery.  
Use only AT&T Battery 240I, SKU# 91077.

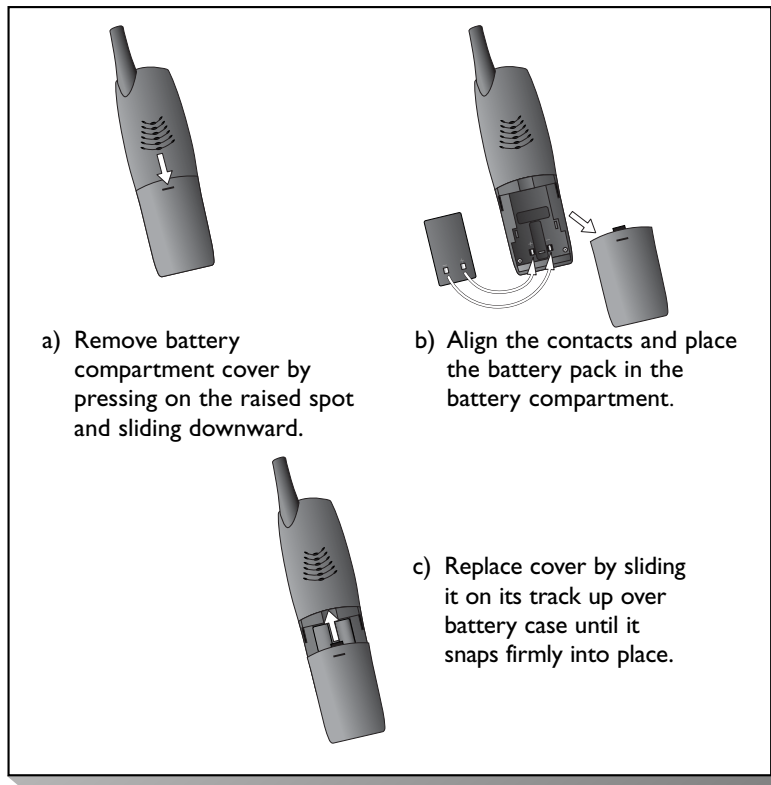

## INSTALLATION

- 4 Charge the handset battery.
- Place the handset in the base.
  - Charge the battery at least 12 hours. After the first charge, the battery will charge in eight hours.
- 5 Check for dial tone.
- After the batteries are charged, lift the handset and press **[PHONE]**; You should hear a dial tone.

## About Handset Registration

- 1 The cordless handset that came with your system is automatically registered as Handset 1. There is no need to re-register.
- 2 You may register up to a total of six Expansion Handsets to this telephone system. (Model 5800 handset sold separately).
- 3 Additional handsets will be assigned Handset 2, Handset 3, Handset 4, Handset 5, and Handset 6.
- 4 When you install the handset battery pack, the handset will display SEARCHING FOR BASE (if it's registered) or ENTER BASE ID (if it has not been registered).

## Register an Additional Handset (Model 5800 Handset)

- 1 Make sure the handset battery pack has been charged for at least 12 hours and that the power cord is plugged into the base unit.
- 2 At the cordless handset, press the softkey under **NEW**.
- 3 Enter the 15-digit Base Unit ID Code located on the underside of your Model 5870 base.
- 4 Press the softkey under **OK**. The screen displays PLEASE WAIT!!
- 5 After about 45 seconds, the screen displays FOUND BASE. If the handset displays BASE BUSY TRY LATER, the base is in use. Wait until the base is in idle, then try the registration process again by repeating the step 2-4 above.

## Wall Installation

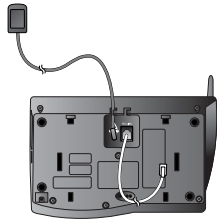


figure a

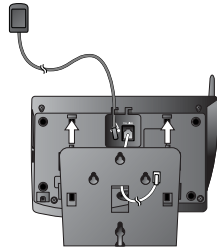


figure b

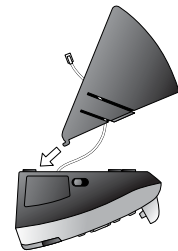


figure c

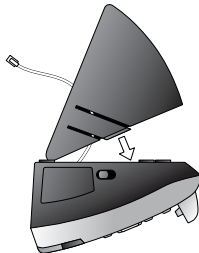


figure d

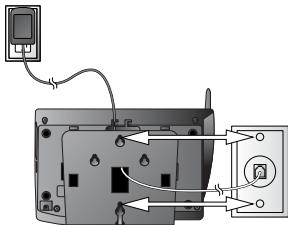


figure e

- 1 **Connect the power cord and telephone line cord to the underside of the base, as shown (figure a).**
- 2 **Position the mounting bracket as shown (figure b).**
- 3 **Feed the short telephone line cord through the hole in the center of the mounting bracket (figure b), align the bracket with the base, and slide into the hole on the base as shown (figure c).**
- 4 **Lock the mounting bracket in place (figure d).**
- 5 **Plug the short telephone line cord into a modular wall jack, and mount the base on the wall (figure e).**
  - a) Align holes on base with mounting studs on wall jack.
  - b) Place power cord as shown.
  - c) Pull base down on mounting studs until it locks into place.
- 6 **Plug the power cord into an electrical outlet not controlled by a wall switch (figure e).**

The ON/OFF light goes on, and **CL** flashes in the Message Window.



Use only the power cord supplied with this product. If you need a replacement, call 1-800-222-3111.


- 7 **Follow Steps 3–5 in “Table/Desktop Installation.”**

### Spare Battery/Power Failure Backup

You can buy a spare handset battery (AT&T Battery 2401, SKU# 91077, sold separately) and keep it charged in the base at all times.


In the event of a power failure, a fully charged battery in the spare battery compartment will allow you to make and receive calls from the cordless handset only for up to 2½ hours.

The spare battery will fully charge in 24 hours.

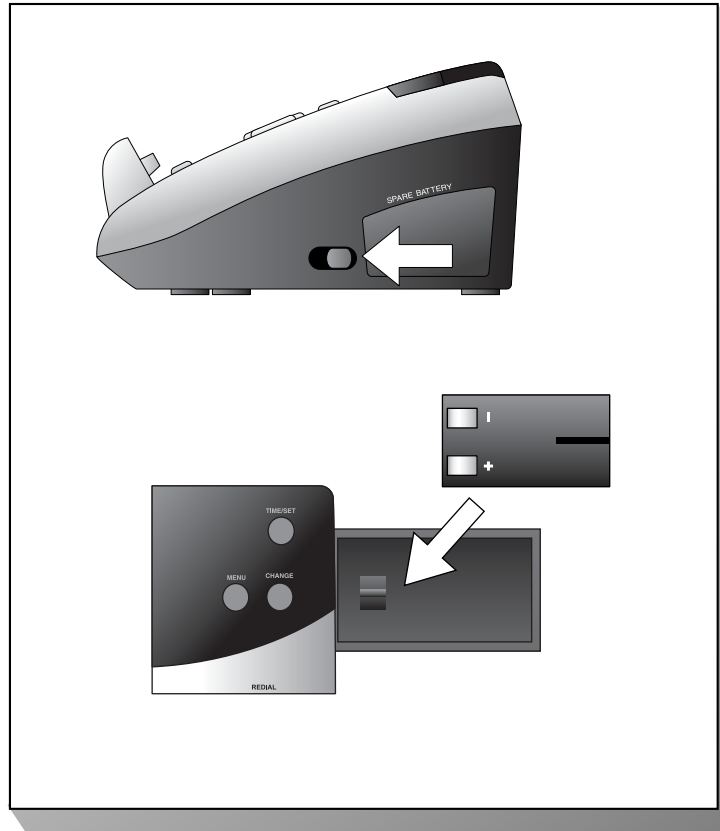

## Belt Clip

You may choose to use the optional belt clip with your handset.

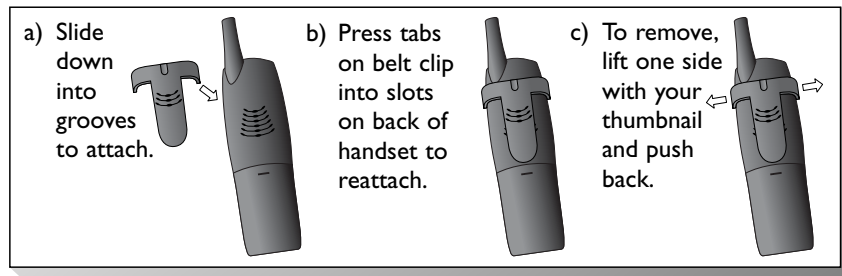

## Headset

You can use this telephone hands-free when you install any industry standard 2.5 mm headset (purchased separately). For best results use an AT&T 2.5 mm headset.


Plug the headset into the jack located on the left side of the handset (under the small rubber flap). Do not force the connection, but make sure the plug fits securely.



## FEATURE SETUP – HANDSET

### Feature Setup Menu

Press the softkey under **MENU** to enter the Feature Setup menu. Use **▲** or **▼** to choose features, then select **OK** to save your choice.

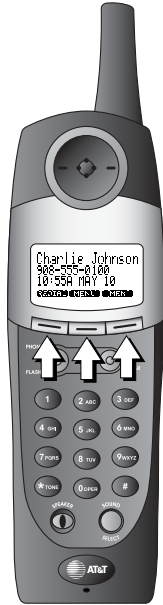

Ⓢ **NOTE:** If you wait more than 20 seconds without pressing a key, the handset returns to the idle screen.

Ⓢ **NOTE:** If you receive an incoming call while in feature setup, the phone automatically exits the menu to let you take the call.


### Set Time

You can choose to set the time manually, or you can allow it to be set automatically with incoming Caller ID information.

- 1 Press **MENU**.
- 2 Press **▼** until the screen displays



- 3 Press **OK**. The screen displays the current time setting. Use **◀** to move the cursor, and use the keypad to change a digit. Press **AM/PM** to select AM or PM.
- 4 Press **SAVE** to save the displayed time.

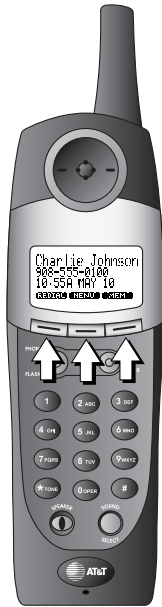

## Clock Mode

You can choose to display the time when the phone is idle, or you can turn this feature off. The default setting is ON.

- 1 Press **MENU**.
- 2 Press **DOWN** until the screen highlights



- 3 Press **OK**. The screen displays



- 4 Press **OFF** or **ON**.
- 5 Press **OK** to save the displayed setting.




## Sound Select

This telephone uses the latest acoustic receiver design, providing you with four different sound quality settings.


During a call, you can adjust the quality of the sound. Pressing **SOUND SELECT** repeatedly will cycle you through four different responses.

Ⓢ **NOTE: The mid-boost setting is hearing-aid compatible.**


**BASS** – Low frequency sounds enhanced.

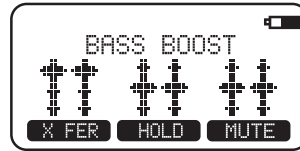


**MID** – Mid-range sounds enhanced.

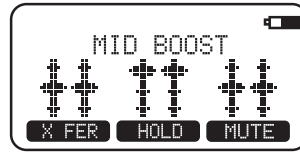


**TREBLE** – High frequency sounds enhanced.

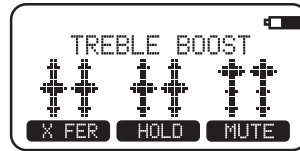

**NATURAL** – No frequency enhancement.

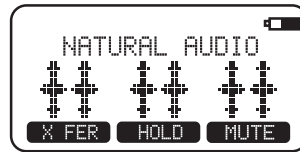


Ⓢ **NOTE: This feature is available only on the handset earpiece, not on the speakerphone or optional headset.**

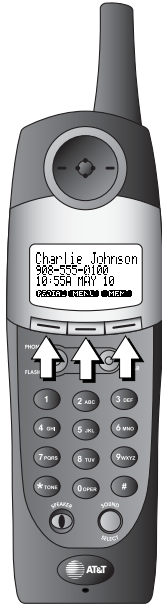

## Ringer Volume


Adjust the volume of the handset ringer. Setting the volume so that no bars show on the graph turns the ringer off.

- 1 Press **MENU**, then **▼** until the screen highlights **HANDSET SETTINGS**.
- 2 Press **OK**.
- 3 Press **OK** when **RINGER VOLUME** is highlighted. The screen displays

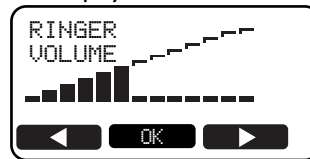

- 4 Press **◀** or **▶** to hear samples of ring volumes.
- 5 Press **OK** to save the displayed setting.

Ⓢ **NOTE:** Ringer Volume and Vibrate settings are independent. Adjusting Ringer Volume does not affect Vibrate.

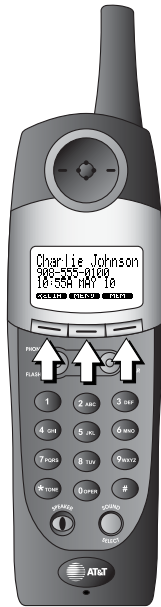

## Ringer Melody

The Ringer Melody sets which ringer you hear when you have an outside call. The Ringer Melody default setting is #01; there are eight Ringer Melody selections.

- 1 Press **MENU**, then **▼** until the screen highlights handset settings.
- 2 Press **OK**, then **▼** until the screen highlights ringer melody.
- 3 Press **OK**. The screen displays




- 4 Press **◀** or **▶** to display desired setting. A sample of the displayed setting is played briefly.

If the ringer is off, no melodies will play when select the melodies in step 4.

Adjust the volume of the handset ringer. Setting the volume so that no bars show on the graph turns the ringer off.


- 5 Press **OK** to save the displayed setting. You will hear a confirmation tone.

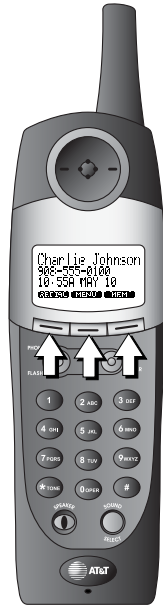

## Vibrate Control


When this feature is on, the handset vibrates when you have an incoming call. The default setting is OFF.

- 1 Press **MENU**, then **▼** until the screen highlights **HANDSET SETTINGS**.
- 2 Press **OK**, then **▼** until the screen highlights **VIBRATE CONTROL**.
- 3 Press **OK**. The screen displays

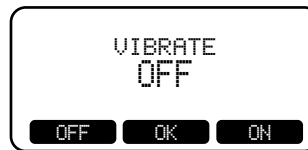

- 4 Press **OFF** or **ON**.
- 5 Press **OK** to save the displayed setting.

Ⓢ **NOTE:** Vibrate and Ringer Volume settings are independent. Adjusting Vibrate does not affect Ringer Volume.

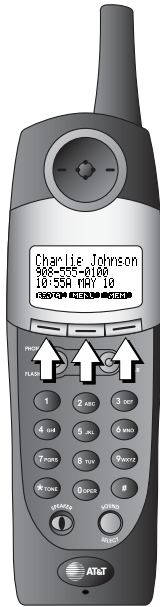


## Low Batt Tone

You can set the handset to sound a tone when battery power is low, or you can turn the tone off. Default setting is ON.

- 1 Press **MENU**, then **▼** until the screen highlights handset settings.
- 2 Press **OK**, then **▼** until the screen highlights low batt tone.
- 3 Press **OK**. The screen displays




- 4 Press **OFF** or **ON**.
- 5 Press **OK** to save the displayed setting.

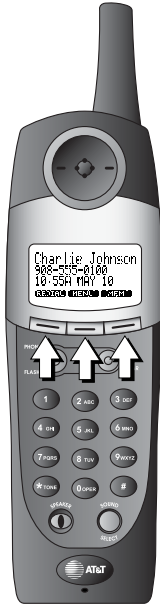

## Range Tone

You can set the handset to sound a tone when you are approaching the range limit, or you can turn this tone off. The default setting is ON.

- 1 Press **MENU**, then **▼** until the screen highlights **HANDSET SETTINGS**.
- 2 Press **OK**, then **▼** until the screen highlights **RANGE TONE**.
- 3 Press **OK**. The screen displays

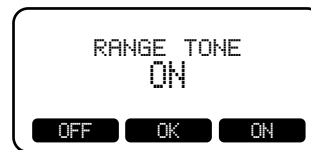

- 4 Press **OFF** or **ON**.
- 5 Press **OK** to save the displayed setting.

FEATURE SETUP - HANDSET




## Keypad Tone

When this feature is on, each key press makes a sound. The default setting is ON.

- 1 Press **MENU**, then **▼** until the screen highlights handset settings.
- 2 Press **OK**, then **▼** until the screen highlights keypad tone.
- 3 Press **OK**. The screen displays



- 4 Press **OFF** or **ON**.
- 5 Press **OK** to save the displayed setting.

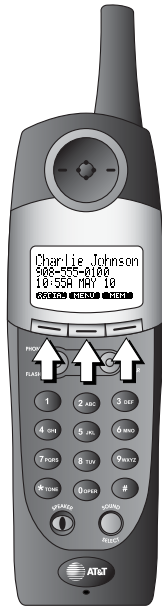


## Set Contrast

You can adjust the screen contrast for easy viewing.

- 1 Press **MENU**, then **▼** until the screen highlights **HANDSET SETTINGS**.
- 2 Press **OK**, then **▼** until the screen highlights **CONTRAST**.
- 3 Press **OK**. The screen displays



- 4 Press **◀** or **▶** to decrease or increase contrast.
- 5 Press **OK** to save the displayed setting.

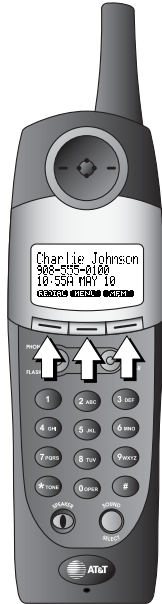

## Language Setting

You can set each registered handset so the display appears in English, Spanish or French. The default setting is ENGLISH.

- 1 Press **MENU**, then **▼** until the screen highlights handset settings.
- 2 Press **OK**, then **▼** until the screen highlights language.
- 3 Press **OK**. The screen displays





- 4 Press **▼** to highlight the desired language.
- 5 Press **OK** to save the displayed setting.


## FEATURE SETUP – BASE

### Ringer Volume

- 1 Make sure the base is not in use.
- 2 Pressing and holding **MUTE**, then press VOL ▲ or VOL ▼ to adjust the ringer volume. Each time you press ▲ or ▼ you will hear how loud the setting is. To turn the ringer off, press ▼ until you hear no tone.

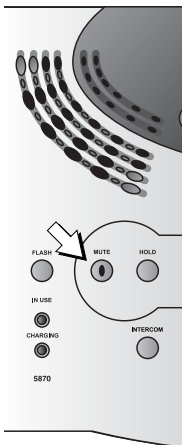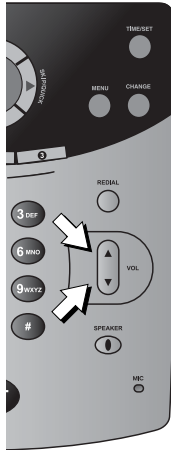

FEATURE SETUP – BASE

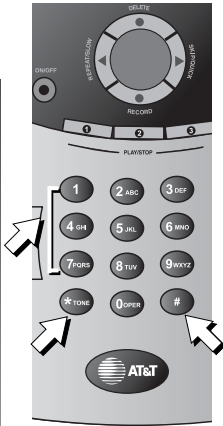

## Ringer Melody


- 1 Make sure the base is off.
- 2 Press **ⓧ ⓧ ⓧ**. You will hear a tone and the IN USE light will flash.
- 3 Press **1**, **2**, **3**, **4**, **5**, **6**, **7**, or **8** to select a ringer melody. Each time you press a key, you'll hear a sample of the melody.
- 4 Press **#** to save your selection  
— OR —  
Press **ⓧ** to exit without saving.

## Dial Mode (Tone/Pulse)



- 1 Make sure the base is off.
- 2 Press **\* \* \***. You will hear a tone and the IN USE light will flash.
- 3 Press **0**. If the IN USE light goes on, you have selected TONE. If the light goes off, you have selected PULSE. Press **0** again to change your selection.
- 4 Press **#** to save your selection  
— OR —  
Press **\* \* \*** to exit without saving.



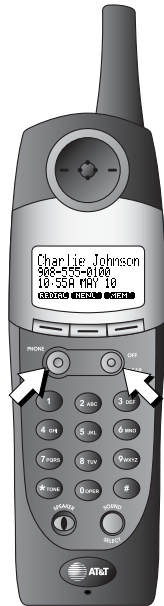

## Make a Call

### At the Handset

- 1 Press **PHONE**, then dial the number  
— OR —  
Dial the number, then press **PHONE**.
- 2 To end the call, press **OFF** or place the handset in the base.

### At the Base

- 1 Press **SPEAKER**, then dial the number.
- 2 To end the call, press **SPEAKER** again.

## Answer a Call

### At the Handset

- 1 Press **PHONE** to answer a call.
- 2 To end the call, press **OFF** or place the handset in the base.

### At the Base

- 1 Press **SPEAKER** to answer a call.
- 2 To end the call, press **SPEAKER** again.






## Volume


### Handset

You can adjust the volume of what you hear through the handset during a conversation by pressing ▲ or ▼ on the right side of the handset. You will hear a special tone when you reach the highest or lowest setting.

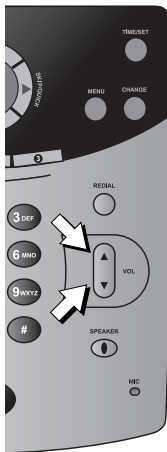

### Speaker

During a conversation, press VOL ▲ or VOL ▼ to adjust the base speaker volume. You will hear a special tone when you reach the highest or lowest setting.

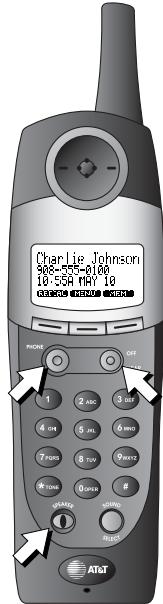

## Handset Speakerphone

When the handset speakerphone is activated, you can use the phone hands-free. Stand the handset on a flat surface (not in the base) and continue your conversation.

⊙ **NOTE:** For best performance, use the handset speakerphone in a quiet location with the handset facing you from no more than four feet away.

### Make a Call

- 1 Press **[SPEAKER]**, then dial the number  
— OR —  
Dial the number, then press **[SPEAKER]**.
- 2 To end the call, press **[OFF]**.  
— OR —  
Place the handset in the base.

### Answer a Call

- 1 Press **[SPEAKER]** to answer a call.
- 2 To end the call, press **[OFF]**.  
— OR —  
Place the handset in the base.

### Switch Between Handset and Speakerphone

While on a call you can press **[SPEAKER]** to switch to speakerphone. While on a speakerphone call, press **[SPEAKER]** to return to the handset earpiece.

⊙ **NOTE:** If you press **[PHONE]** while you are on the speakerphone, you will flash the call.

## Redial Handset

The last ten phone numbers dialed at the handset are stored in redial memory.

- 1 Press **REDIAL** then press **▲** or **▼** to scroll through the number in Redial Memory.
- 2 Press **PHONE** or **SPEAKER** to dial the highlighted number.
- 3 Press **OFF** to end the call.

### Save a Redial Number

- 1 Press **REDIAL**.
- 2 Press **▲** or **▼** until the screen highlights the number you want to save, then press **SELECT**.
- 3 Press **SAVE**. The screen displays ENTER NAME.
- 4 Using the chart on page 39, enter the name associated with the redial number; then press **SAVE**. The screen displays ENTRY HAS BEEN STORED! and gives a confirmation tone.
- 5 Screen displays RECORD VOICE ANNOUNCEMENT? Press **YES** to record an announcement to be played when you receive a call from this number (then follow directions from step 4 to step 6 on page 45)  
— OR —  
Press **NO** to exit without recording an announcement.



### Delete a Redial Number

- 1 Press **REDIAL**.
- 2 Press **▲** or **▼** until the screen displays the number you want to delete.
- 3 Press **SELECT**.
- 4 Press **ERASE**. You will hear a confirmation tone.


### Base

The last phone number dialed at the base is stored in redial memory. When the base is idle, to delete the redial number, press and hold **REDIAL**.

- 1 Press **SPEAKER**.
- 2 Press **REDIAL** to dial the last number called from the base.  
— OR —  
Press **REDIAL** directly. The last number called from the base will dial automatically.
- 3 Press **SPEAKER** to end the call.
- 4 To delete the redial number, press and hold **REDIAL**.

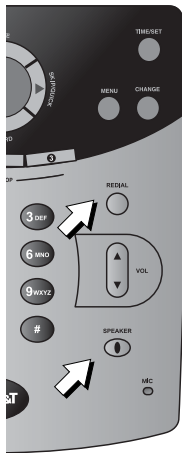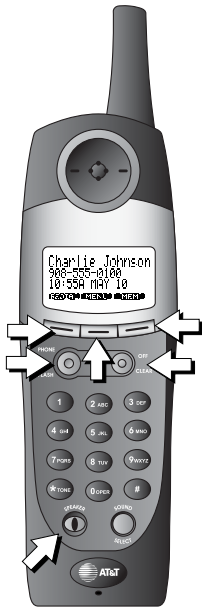

TELEPHONE OPERATION

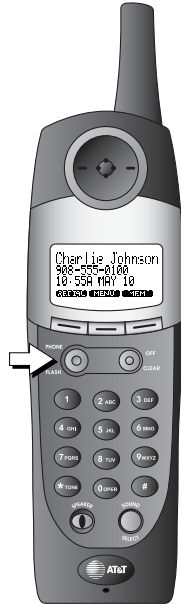


### Flash/Call Waiting

If you subscribe to Call Waiting service with your local telephone service provider, you can answer a new incoming call without losing your current call.

#### Handset

- 1 Press **PHONE**/**FLASH** to connect to the new call when you receive a call-waiting signal.
- 2 Press **PHONE**/**FLASH** again to return to the original call.


**NOTE:** Use **PHONE**/**FLASH** to access other phone company subscriber services, as described by your provider.

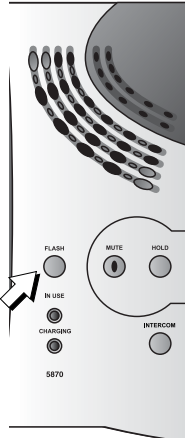

#### Base

- 1 Press **FLASH** to connect to the new call when you receive a call-waiting signal.
- 2 Press **FLASH** again to return to the original call.

**NOTE:** Use **FLASH** to access other phone company subscriber services, as described by your provider.

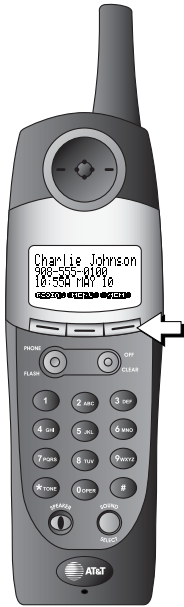


## Mute Handset

- 1 During a telephone conversation, mute the handset microphone by pressing **MUTE**. The other party will be unable to hear anything on your end. The screen displays



- 2 To return to two-way conversation, press **MUTE** again.

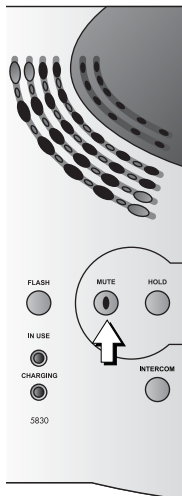

## Base

Press **MUTE** on the base to prevent the other party from hearing you, the MUTE light goes on. Press **MUTE** again to return to two-way conversation.




## Hold Handset

**NOTE:** When a call is on hold, the screen displays CALL ON HOLD. If the clock feature is on, this message will be displayed for five seconds, then return to the clock display with **H** on top of the screen.

After five minutes, the handset will ring to remind you there's a call on hold. If you do not answer the ring, the call will be disconnected.


- 1 While on a call, press **HOLD**. You can now use the intercom if you wish (see page 34).
- 2 To return to the call, press **PHONE**.

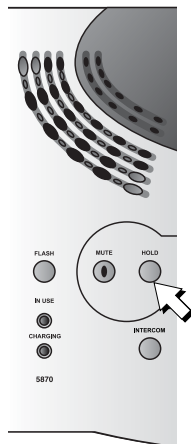

## Base

- 1 Press **HOLD** on the base to place a call on hold. The IN USE light goes on and the SPEAKER light flashes.
- 2 Press **HOLD** again or press **SPEAKER** to return to the call.

After five minutes, the base will ring to remind you there's a call on hold. If you do not answer the ring, the call will be disconnected.

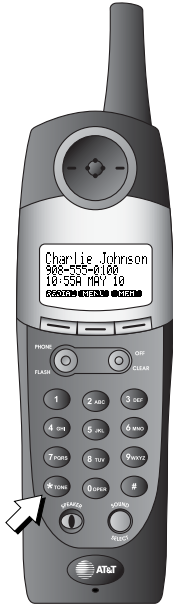

## Temporary Tone Dialing

If you have dial pulse (rotary) service, you can change from dial pulse to touch tone dialing during a call.

- 1 Make the call, and wait until it is connected.
- 2 Press **TONE**. Keys pressed after this send touch tone signals.
- 3 After you hang up, the phone automatically returns to dial pulse (rotary) service.



## DISPLAY SCREEN MESSAGES

### SCREEN DISPLAYS: WHEN:

INCOMING OUTSIDE CALL	You have an incoming phone call (without Caller ID).
INTERCOM FROM [PARTY NAME]	You have an intercom call from [PARTY NAME], for example HANDSET 2. Once an intercom call is underway, the handsets will show the icons of the participating parties.
LOW BATTERY	The handset battery is low.
EXTENSION IN USE	Another phone on this line is in use.
PARALLEL SET IN USE	Both this phone and another phone on this line are in use.
SEARCHING FOR BASE	The handset is out of range.
REJECTED BY BASE	The base refused to accept the handset, either because it is in use by six handsets, or the handset registrations on the base have been deleted.
FOUND BASE	The handset has finished SEARCHING FOR BASE and has made the link.
LINE IN USE	Another device of the phone system is using the telephone line; for example, if the base is using the line, the handsets will all show this message.
[XX] NEW CALLS	The number of distinct unanswered calls with caller ID which have not been viewed in the calls log.
CALL ON HOLD RING BACK!	A call has been on hold for five minutes; pick up the call again.
CHECK AC POWER	The base is being powered by the spare battery rather than by AC from a wall outlet; check that the base is properly plugged in to a working electrical outlet.

## HANDSET ICONS


### THIS ICON: INDICATES



#### Line In Use indicator


On steady with no number next to it when another phone on this line is in use.

On steady with one or more numbers next to it, indicating which extensions are using the line.

For example,  12 indicates that Handset 1 and Handset 2 are on an outside call.


 


#### Intercom indicator

On steady with the extension numbers currently on an intercom call. For example,  02 indicates that the Base and Handset 2 are on an intercom call.



#### Battery indicator


When the handset is removed from the charger, this lets you know the level of charge in the battery pack, from FULL () to EMPTY ()

Cycles (Low, Medium, and Full) when handset battery is charging.

Flashes when a low battery condition is detected.



#### Ringer Off indicator

 is displayed when the ringer is turned off.



#### Enhanced Mode indicator

On steady when active handset is in Enhanced Mode.

The handset will enter Enhanced Mode automatically when in an area with interference.



#### Mute indicator

On steady when the handset microphone is muted.




#### Hold indicator

On steady when the line is on hold.



#### Handset Registration indicator

 is displayed when a handset is either not registered, or searching for the base unit.



#### Handset indicator

Number is displayed to show which set is in use.



#### Answering indicator

The answering system is answering an incoming call.



## BASE LIGHTS

LIGHT	STATUS:	INDICATES:
IN USE	on	Base or handset is on a call.
IN USE	flashing	Extension is in use.
CHARGING	on	Handset is in the base charging.
MUTE	on	Base microphone is muted.
SPEAKER	flashing	Hold function is activated.
SPEAKER	on	Base speakerphone is in use.
ON/OFF	on	Answering system is on.
ON/OFF	off	Answering system is off.
PLAY/STOP	flashing	New messages in this mailbox.
PLAY/STOP	on	Old or reviewed messages in the mailbox.
PLAY/STOP	off	No messages in this mailbox.

## TONES AND WHAT THEY MEAN

STONE:	INDICATES:
Two quick beeps	Handset is out of range of the base.
Three quick beeps	Battery charge is low.
One beep	Handset registration is complete — OR — A programming command is successfully completed.
One long beep	Indicates an error in programming.

## INTERCOM OPERATION

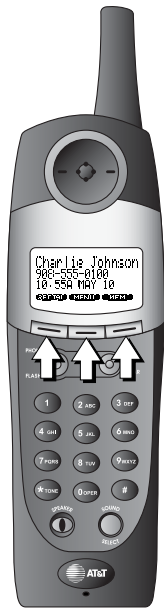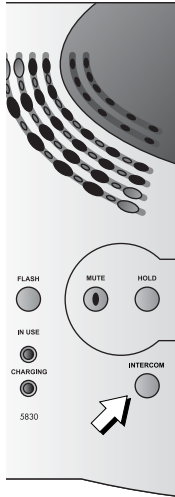

### Intercom Calls

If you have more than one handset (AT&T 5800, purchased separately) registered with your 5870 base, you can make intercom calls between handsets.

#### From Base to All Handsets

- 1 Press **INTERCOM** on the base.
- 2 All handsets will ring.

#### From Base to Selected Handset

- 1 Press **INTERCOM** on the base.
- 2 Press the number of the handset you want to reach (for example **3**).

#### From Handset to Base

- 1 Press **MENU**, then press **▼** until INTERCOM is highlighted.
- 2 Press **OK**.
- 3 Press **▼** until BASE is highlighted, then press **OK**.

#### From Handset to Handset


- 1 Press **MENU**, then press **▼** until INTERCOM is highlighted.
- 2 Press **OK**.
- 3 Press **▼** until the desired handset is highlighted, then press **OK**.

#### From Handset to Base/Handset(s)

- 1 Press **MENU**, then press **▼** until INTERCOM is highlighted.
- 2 Press **OK**.
- 3 Press **▼** until GLOBAL PAGE is highlighted then press **OK**.

INTERCOM OPERATION

**INTERCOM OPERATION**

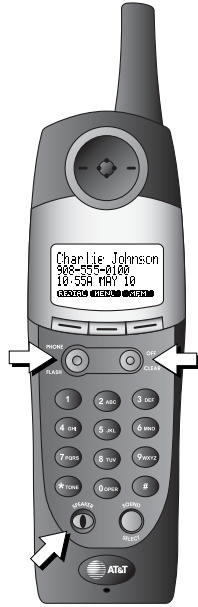

### Answering Intercom

At handset, press **PHONE**.  
 At base, automatically answered.

### End Intercom

At handset, press **OFF**.  
 At base, press **SPEAKER**.

### To Answer an Incoming Call While Intercomming


If an incoming call is received while you are using the intercom, you will hear a beep and the screen will display call informations as usual for 10 seconds.


### To end the intercom call and answer the incoming call:

- Press **OFF** twice on the handset or **INTERCOM** on the base to end the intercom call.
- Wait for the handset or the base to ring, then press **PHONE** (or **SPEAKER**) on the handset or **SPEAKER** on the base to answer the call.

### To conference the incoming call with the intercom call:

- Press **PHONE** on the handset to conference the outside line with the base and the handset, or with the two handsets.
- OR —**
- Press **SPEAKER** on the base to conference the outside line with the base and the handset.

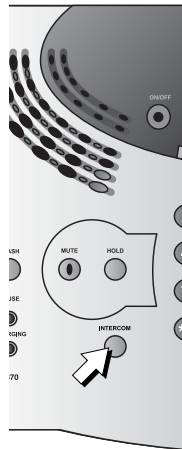

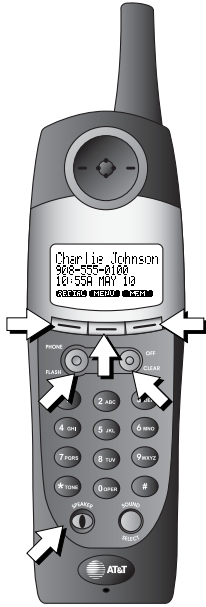

## Blind Call Transfer

If you have installed additional AT&T 5800 handsets (purchased separately) with your 5870 telephone, you can transfer a call from one handset to another.

### From the Handset

- 1 Press **TRANSFER**, then use **▼** to highlight where you want the call transferred.
- 2 Press **OK** when the desired destination is highlighted to complete the transfer.

### From the Base

- 1 Press **INTERCOM**.
- 2 Press the number of the handset where you want the call transferred (for example, **2**).

**NOTE:** An unanswered call will ring back to the originating handset or base if not answered in 30 seconds. If the originating handset or base does not answer the unanswered call yet, the call will end automatically in 30 seconds.



## Announced Call Transfer

### From the Handset

- 1 Press **HOLD** to put the call on hold.
- 2 Press **MENU**, then use **▼** to highlight **INTERCOM**.
- 3 Press **OK**, then use **▼** to highlight the call destination, then press **OK** again.
- 4 When the handset or base answers, announce the caller.
- 5 Press **OFF** on the handset or **SPEAKER** on the base to end the call.
- 6 Press **PHONE** on the receiving handset or **SPEAKER** on the base to pick up the call on hold.

### From the Base

- 1 Press **HOLD** to put the call on hold.
- 2 Press **INTERCOM**, then press the number (1~6) of the handset you want to reach.
- 3 When the handset answers, announce the caller.
- 4 Press **OFF** on the handset or **SPEAKER** on the base to end the call.
- 5 Press **PHONE** on the receiving handset to pick up the call on hold.

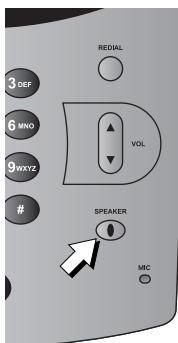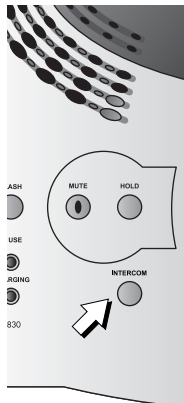



## Conference Calling

### From the Handset

- 1 If one handset is already on a call, you can connect a second handset to the call by pressing **PHONE** on the second handset

— OR —

If you are on an intercom call and have a second call on hold, press **PHONE** to add the held call to the conference call.

- 2 Disconnect either or both handsets by pressing **OFF**.

### From the Base

- 1 If one handset is already on a call, you can connect the base to the call by pressing **SPEAKER** on the base.


— OR —

If you are on a call and have a second call on hold (one is an incoming call, the other is an outgoing call; or both are outgoing calls) on the base at the same time by using flash function, press **FLASH** to add the held call to the conference call.

- 2 Disconnect the handset by pressing **OFF** on the handset or disconnect the base pressing **SPEAKER** on the base.


## PHONE BOOK

This telephone can store up to 50 telephone numbers and names. Each number can be up to 32 digits long and each name can be up to 16 characters.

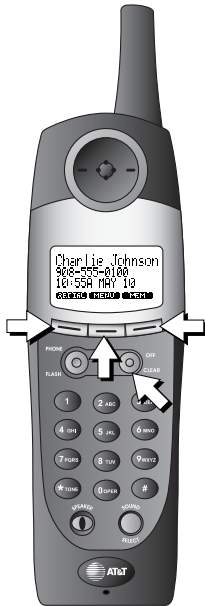

### Store a Number and Name in Phone Book

- 1 Enter the number you want to store. The screen displays the number you enter. To delete a digit, press **OFF/CLEAR**; to clear the screen press and hold **OFF/CLEAR**.

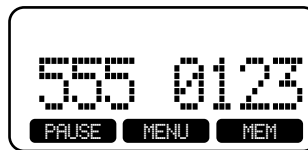


- 2 Press **MEM**. The screen displays



- 3 Use the keypad and the chart on page 39 to enter the name




- 4 Press **SAVE**. The screen displays

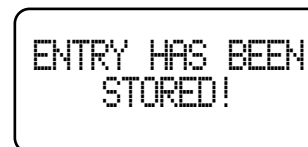

- 5 To record a Talking Caller ID announcement for this phone book entry, please turn to page 45.

## Keypad Characters

Dial Key	1	2	3	4	5	6	7	8	9
1	&	'	,	.	l				
2	A	B	C	a	b	c	2		
3	D	E	F	d	e	f	3		
4	G	H	I	g	h	i	4		
5	J	K	L	j	k	l	5		
6	M	N	O	m	n	o	6		
7	P	Q	R	S	p	q	r	s	7
8	T	U	V	t	u	v	8		
9	W	X	Y	Z	w	x	y	z	9
0	0								
*	*								
#	#								

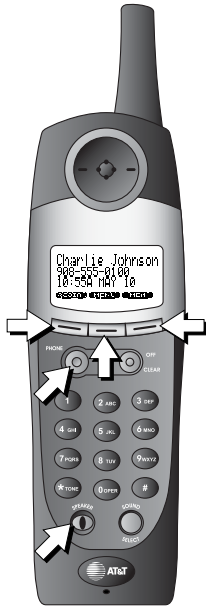

## Dial a Number in Phone Book

- 1 Press **MEM**. The screen displays



- 2 Press **▲** or **▼** to scroll through memory in alphabetical order

— OR —

Enter the first letter of a name (then **▲** or **▼**, if necessary) to display the name you're searching for





— OR —

Press **FIND**, then enter the first few letters of the name you're searching for and press **FIND** again.

- 3 Press **PHONE** or **SPEAKER** to dial the displayed number.

PHONE BOOK

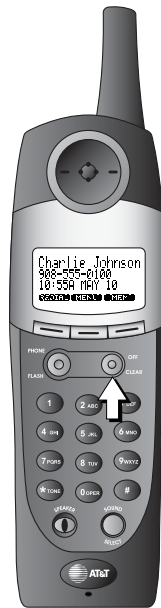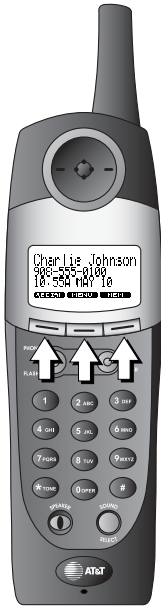

## Edit a Number/Name in Phone Book

- 1 Press **MEM**. The screen displays



- 2 Press **▲** or **▼** to scroll through memory in alphabetical order

— OR —

Enter the first letter of a name (then **▲** or **▼**, if necessary) to display the name you're searching for



— OR —

Press **FIND**, then enter the first few letters of the name you're searching for and press **FIND** again.

- 3 Press **EDIT** twice. The handset displays




- 4 Press **NAME** or **NUMBER**, depending on which you want to edit.

- 5 Press **▶** to move the cursor to the character or digit you want to edit, then enter the corrections as needed. Press **MORE** to toggle between DEL, SPACE, BACK or PAUSE functions if necessary.

- 6 Press **SAVE** to save changes. The screen will display the updated entry.

— OR —

Press **OFF** to exit without saving.

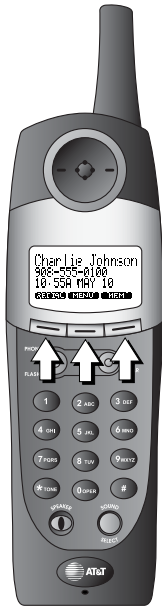

## Delete a Number/Name in Phone Book

- 1 Press **MEM**. The screen displays



- 2 Press **▲** or **▼** to scroll through memory in alphabetical order

— OR —

Enter the first letter of a name (then **▲** or **▼**, if necessary) to display the name you're searching for



— OR —

Press **FIND**, then enter the first few letters of the name you're searching for and press **FIND** again.

- 3 Press **EDIT**. The handset displays



- 4 Press **DEL**. The screen displays



- 5 To delete only the displayed name and number, press **THIS**

— OR —


To delete all records, press **ALL**. The screen displays



- 6 To delete all records, press **YES**. To exit without deleting, press **NO**.

## CALLER ID OPERATION

If you subscribe to Caller ID service with your local phone service provider, this phone stores all incoming calls (up to 50 at the handset) with valid Caller ID information in the calls log. Name, number, time and date information can all be stored, if they are sent with the call. Calls are automatically stored in the order they are received, with call "1" stored as the most recent call. The calls log number appears next to the date on the screen display.

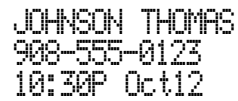

JOHNSON THOMAS  
908-555-0123  
10:30P Oct12

**NOTE:** The number of new calls displayed on each handset may not be the same. For example, if you answer a call on Handset 2, it will not consider that call information as new, but other handsets will.

If Caller ID information has been received you can see a summary of the new calls on the idle screen. After you review all new call records, the NEW CALLS indicator will go off.



HANDSET 1  
5 NEW CALLS

REDIAL MENU MEM

If the Clock Mode is on, the screen will be



12  
9 3  
6  
10:30 PM  
5 NEW  
CALLS

REDIAL MENU MEM



## Setup Talking Caller ID

When you set up this feature, the base can announce the name or telephone number of up to 50 callers whose names/numbers are stored in your phone book before you answer the call. Each announcement can be up to three seconds long.

**NOTE:** If the caller has blocked Caller ID information and this feature is on, the base announces "Private Caller."


- 1 Press **MENU**, then press **DOWN** until the screen highlights **VOICE ANNOUNCE**.



- 2 Press **OK**, then press **DOWN** until the screen highlights **SELECT TYPE**.



- 3 Press **OK**, then press **UP** or **DOWN** to highlight one of four options.
  - OFF:** Disable Talking Caller ID feature.
  - NUMBER:** Sets system to announce received telephone numbers only.
  - NAME:** Set system to announce recorded voice announcements only.
  - NAME OR NUMBER:** Sets system to announce telephone numbers (for calls received that are not entered in your phone book) or recorded voice announcements.

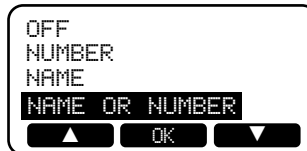

- 4 Press **OK**.

**CALLER ID OPERATION**




## Record a New Talking Caller ID Announcement

- 1 Follow the directions on page 38 to “Store a Number and Name in Phone Book”
- 2 After Step 4 in “Storing a Number and Name in Phone Book” (ENTRY HAS BEEN STORED!) the screen prompts RECORD VOICE ANNOUNCE?
- 3 Press **NO** to store the number without an announcement  
— OR —  
Press **YES** to record an announcement.
- 4 Press **RECORD**. The screen displays

RECORD AFTER  
TONE

Speak directly into the handset microphone holding it directly in front of you, about 12 inches from your mouth.

- 5 Press **STOP** when you are finished recording (system will automatically stop after three seconds).
- 6 Press **PLAY** to review the Talking Caller ID announcement at the base speaker.

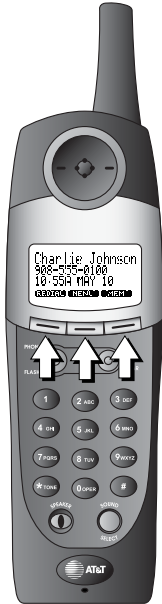

### Edit Talking Caller ID Announcement

- 1 Press **MENU**, then press **▼** until the screen highlights **VOICE ANNOUNCE**.



- 2 Press **OK**, then press **▼** until the screen highlights **RECORD NEW**. Press **OK**.



- 3 Press **▲** or **▼** to scroll through memory in alphabetical order

— OR —

Enter the first letter of a name (then **▲** or **▼**, if necessary) to display the name you're searching for



— OR —

Press **FIND**, then enter the first few letters of the name you're searching for and press **FIND** again.

- 4 Press **EDIT**, then press **VA**. If an announcement is already recorded, the screen displays **ANNOUNCEMENT ALREADY RECORDED**. If you want to change the announcement, press **RECORD** twice. If no announcement is recorded, press announcement is recorded, press **RECORD** once.
- 5 Press **STOP** to end recording.
- 6 Press **PLAY** to review your announcement at the base speaker.

**CALLER ID OPERATION**



## Review, Play, Erase Talking Caller ID Announcements

- 1 Follow Steps 1–4 under “Edit Talking Caller ID Announcement” on page 46.
- 2 Press **ERASE** to delete the announcement  
— OR —  
Press **PLAY** to hear the announcement  
— OR —  
Press **RECORD** twice to re-record an announcement.



## Review Calls Log

- 1 Press **MENU**, then press **OK**. The screen displays the most recent call in the calls log.



- 2 Press **▲** or **▼** to scroll through call records.

## Store Record in Phone book

- 1 While the call information is displayed, press **CID**, then use **#** to scroll through dialing options.

For example: 555-1212  
 1-555-1212  
 908-555-1212  
 1-908-555-1212

— OR —

While the call information is displayed, press **#** to scroll through dialing options, then press **CID**.

For example: 555-1212  
 1-555-1212  
 908-555-1212  
 1-908-555-1212

- 2 Press **SAVE**.
- 3 The screen displays **ENTRY HAS BEEN STORED!**
- 4 To record a Talking Caller ID announcement for this phone book entry, please turn to page 45.

**CALLER ID OPERATION**



### Display Dial

While you are reviewing the calls log, you can dial a number displayed on the screen. You can change the format of the number using "Dialing Options" below.

Press **PHONE** or **SPEAKER** to dial the displayed number.

### Dialing Options

- 1 While a call record is displayed, press **CID**, then select **OPT#**.
- 2 Use **▲** or **▼** to highlight the number the way you want to dial it.

For example:           555-1212  
                              1-555-1212  
                              908-555-1212  
                              1-908-555-1212

The number of dialing options (up to four) available for each call displayed depends on the format of the original call.

## ANSWERING SYSTEM OPERATION AT THE BASE

### Audible Indicators

This system gives you voice prompts for feature operations and voice confirmations when you press a button or complete an operation.



### Turn Answering System On/Off


Press **ON/OFF** to turn the system on or off. When the system is turned on, you will hear “Machine on” and the ON/OFF light will be lit.

When turning the system on for the first time, it will use the default setting and prerecorded outgoing announcements.

### Set the Clock

- 1 Make sure the answering system is on.
- 2 Press **TRVRS**. The system announces the clock setting, then announces “To change clock, press **CHG**.”
- 3 Press **CHG**.
- 4 Press **c** until the system announces the correct day, then press **TRVRS**.
- 5 Press **c** until the system announces the correct hour, then press **TRVRS**.
- 6 Press **c** until the system announces the correct minutes, then press **TRVRS**. The system announces the current clock setting.

**NOTE:** You can press and hold **CHANGE** to advance the minutes setting by tens.

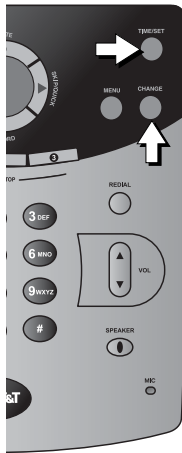

ANSWERING SYSTEM OPERATION


## About Mailboxes

This answering system has three voice mailboxes. Callers using a touch tone phone can select the mailbox in which their messages will be recorded by pressing **1**, **2** or **3**. All other messages will be recorded in Mailbox 1.

## About Announcements

- You can record up to two different announcements — one for normal answering and one for when you've set the system to play the announcement only.
- Use normal answering when you want the system to record callers' messages. Use Announce Only when you want to give information to callers without accepting messages.
- If you choose not to record an announcement, the system answers with a pre-recorded announcement.
- The normal answering pre-recorded announcement says: "Hello. Please leave a message after the tone." The Announce Only pre-recorded announcement says: "We're sorry, messages to this number cannot be accepted."
- By setting Announce Only to on or off, you decide which announcement your callers will hear when the system answers a call (the system comes set for normal answering, with Announce Only turned off). See "Change announce only" on page 55 to change your announcement selection.

## Record Your Announcement

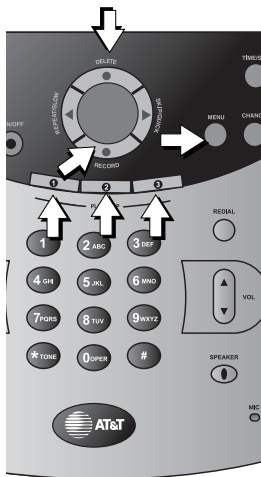

Ⓢ **NOTE:** If you have assigned different mailboxes to different people, be sure to tell callers in your announcement to press **1**, **2**, or **3** to leave a message in the appropriate mailbox.

- 1 Press **MENU** until you hear “Change announcement.”
- 2 Press **RECORD**. After you hear “Now recording” followed by a beep, speak toward the base to record an announcement up to 90 seconds long.
- 3 Press any **PLAY/STOP** button to stop recording. The system plays back your recorded message.

To review your announcement at any time:

- 1 Press **MENU** until you hear “Change announcement.”
- 2 Press any **PLAY/STOP** button.

### **To delete your announcement:**

Press **DELETE** during announcement playback. The system will use the pre-recorded announcement until you record a new one.

ANSWERING SYSTEM OPERATION



## Answering System Feature Setup

You can set up one feature at a time, or you can set up a feature and then move on to set up another feature.

- 1 Make sure the answering system is on.
- 2 Press and release **MENU** until you hear the system announce the feature you want to set. Refer to the Feature Summary chart on page 54 for a description of the features and your choices.
- 3 Press **CHANGE** to hear the feature's settings.
- 4 Press **MENU** to move on to the next feature or press a PLAY/STOP button to exit Feature Setup.

**Feature summary**

Default settings indicated by \*.

**SYSTEM ANNOUNCES:**

**DESCRIPTION/DIRECTIONS:**

<p><b>“Change remote access code”</b> 50 *</p>	<p>Set the remote access code you will use to access features and functions of the answering system from a touch tone phone. The code can be changed to any two-digit number from 40--99. <b>NOTE:</b> You can press and hold <b>CHANGE</b> to advance the remote access code by tens.</p>
<p><b>“Change message alert”</b> * On</p>	<p>When Message Alert is turned on, Off the base beeps once every 10 seconds when new messages have been received.</p>
<p><b>“Change announce only”</b> Off * On</p>	<p>When you turn Announce Only on, callers hear your announcement, but cannot leave a message.</p>
<p><b>“Change call screening”</b> On * Off</p>	<p>When you turn Call Screening off, you will not hear incoming messages as the caller leaves them.</p>
<p><b>“Change number of rings”</b> 2 4 * 6 Toll Saver</p>	<p>Choose how many times the phone will ring before the system answers a call. With Toll Saver active, the system answers after two rings when you have new messages and after four rings when you have no new messages.</p>

**Ⓞ NOTE:** Exit Feature Setup at any time by pressing a PLAY/STOP button.



## Listen to, Save & Delete Messages

The system automatically saves your messages until you delete them, and can store approximately 15 minutes of messages, memos, and announcements (up to a maximum of 99 messages).

Before playing a message, the system announces the day and time it was received. While the message plays, the message window displays the number of the message. After playing the last message in a mailbox, the system announces "End of messages." If the system has less than five minutes of recording time left, it announces the remaining time.

### Play Messages

- Press a PLAY/STOP button to play messages in a mailbox. Press again to stop playback.
- Press **REPEAT/SLOW** to repeat a message; hold it to slow down playback.
- Press **SKIP/QUICK** to skip to the next message; hold it to speed up playback.


### Delete Messages

- Press **DELETE** to delete the message that's playing.
- To delete all messages in a mailbox, press **DELETE**, then the appropriate PLAY/STOP button.

**NOTE:** You cannot delete a message until it's been reviewed; deleted messages cannot be recovered.


## Adjust Playback Volume

Press VOL ▲ or VOL ▼ to adjust the base speaker volume while playing back messages.

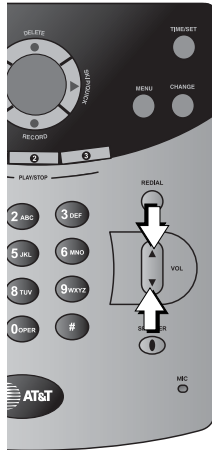


## Call Screening/Intercept

- 1 Make sure the answering system and call screening are on, and set the message playback volume control above level 1 so you can hear the caller's message.
- 2 If you decide to take the call, press **PHONE** on the handset or **SPEAKER** on the base.
- 3 If you pick up an extension phone during the announcement and the announcement does not stop right away, press and release the telephone switchhook at the extension.

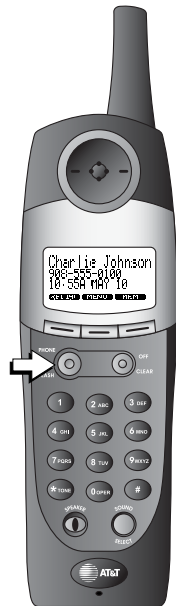

ANSWERING SYSTEM OPERATION

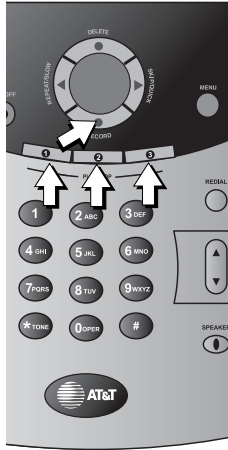

## Record a Memo

You can record a memo up to four minutes long to store as an incoming message.

- 1 Press and release **RECORD**.
- 2 Press a **PLAY/STOP** button to select a mailbox for the memo. After the beep, speak toward the microphone. The message window displays the length of your memo.
- 3 To stop recording, press the **PLAY/STOP** button again.

## MESSAGE WINDOW DISPLAY

### WINDOW DISPLAYS: WHEN:

0	No messages in any mailbox
1 - 99	Total number of messages in all mailboxes, or current message number during message playback.
0 - 99 ↔ F	Memory is full, or total number of messages is 99
Counting 1 to 99	Duration of announcement or memo recording (maximum announcement length is 90 seconds)
99, flashing	Length of recording is more than 99 seconds
1 - 8, steadily for one second	Indicates volume level selected when VOL ▲ or VOL ▼ is pressed
40 - 99	Current Remote Access Code (40-99) while setting
A	Announce Only mode
On or Off, steadily for one second	Displayed when any setting is changed from on or off
CL ↔ normal display	Clock needs to be set
--	System is answering a call or is in remote operation
--, flashing	System is in programming mode or initializing

## ANSWERING SYSTEM OPERATION AT TOUCH TONE PHONE

### Connect with the Answering System

You can access many features of this system remotely from a touch tone phone.

- 1 Dial your telephone number.
- 2 When the system answers, enter your Remote Access Code (preset to 50). The system beeps once and then announces the number of new messages.
- 3 Enter a remote command (see "Remote Access Commands" on page 60).
- 4 Press **ⓧ** **0** to exit remote operation.

## ANSWERING SYSTEM OPERATION

### Voice Menu

The system has voice prompts to help you with remote operation. Press **ⓧ** 5 to hear the menu while remotely connected to the answering system.

## REMOTE ACCESS COMMANDS

FUNCTION:	COMMAND:
<b>Play messages in a mailbox</b>	Press <b>#</b> , then enter the appropriate mailbox number ( <b>1</b> , <b>2</b> , or <b>3</b> ). The system plays new messages. If there are no new messages, the system plays old messages.
<b>Repeat a message</b>	Press <b># 4</b> while message is playing; Press <b># 4</b> twice back up another message.
<b>Skip a message</b>	Press <b># 6</b> while message is playing; each press advances another message.
<b>Stop</b>	Press <b># 5</b> .
<b>Save messages</b>	Hang up.
<b>Delete message</b>	Press <b># 9</b> while message is playing.
<b>Review announcement</b>	Press <b># 7</b> ; system plays announcement, then beeps.
<b>Record announcement</b>	Press <b>* 7</b> ; after beep, record announcement, press <b># 5</b> to stop. System plays back announcement.
<b>Record memo</b>	Press <b>* 8</b> ; then mailbox number where you want memo recorded; speak after beep; press <b># 5</b> to exit.
<b>End remote access call</b>	Press <b>* 0</b> .
<b>Turn system off</b>	Press <b># 0</b> ; the system announces, "Machine off." Press <b># 0</b> again to turn the system back on.
<b>Turn system on</b>	When system is off, it answers after 10 rings and announces, "Please enter your remote access code." Enter your remote access code.

**NOTE:** If no key is pressed within 10 seconds of entering remote access code, the voice menu will be announced. After the voice menu announcement, if no key is pressed within 20 seconds, the remote access call will automatically end.


## BATTERIES

### Battery Life

A fully charged battery provides an average talk time of about eight hours, or standby time of five days.

**NOTE:** Talk time and standby time may vary depending on operating conditions.

### Battery Indicator

Ten to fifteen minutes before the battery charge gets too low to operate the handset, an empty battery icon () will flash on the screen, you'll hear three short tones, and the screen will display LOW BATTERY.

If you continue to use the handset without charging the battery or replacing it (you can purchase a spare battery separately), the handset will turn off automatically when there is no longer sufficient power.

**NOTE:** Monitor the battery icon to make sure your battery is sufficiently charged.

### Charge the Handset Battery Pack

- After a low battery indicator, the handset battery needs to be charged.
- Place the handset in the base so the CHARGING light goes on. The battery pack is typically charged in eight hours.
- If you repeatedly get a low battery indicator, even after eight hours of charging, the battery should be replaced. Use only AT&T Battery 2401, SKU# 91077.




**CAUTION:** Charge the battery provided with or identified for use with this product only in accordance with the instructions and limitations specified in the User's Manual, Part I.

### Spare Battery/Power Failure Backup

You can buy a spare handset battery (AT&T Battery 2401, SKU# 91077, sold separately) and keep it charged in the base at all times.

In the event of a power failure, a fully charged battery in the spare battery compartment will allow you to make and receive calls from the cordless handset only for up to 2 1/2 hours.

The spare battery will fully charge in 24 hours.

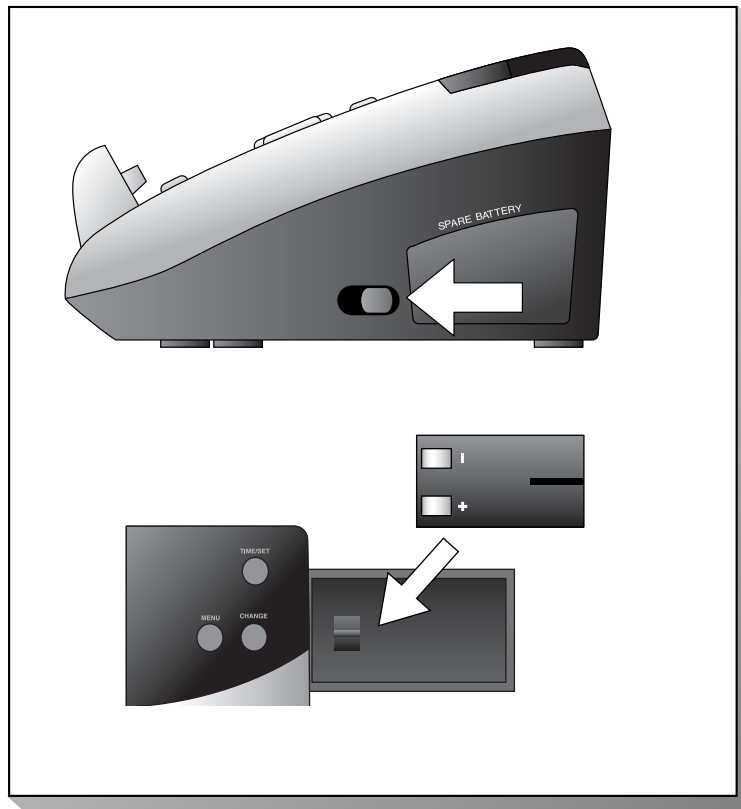


**BATTERIES**

## Replace the Handset Battery Pack

- 1 Install the handset battery.  
Use only AT&T Battery 2401, SKU# 91077.
- 2 Charge the handset battery.
  - Place the handset in the base.
  - Charge the battery for at least 12 hours. After the first charge, the battery will charge in eight hours.

### BATTERIES

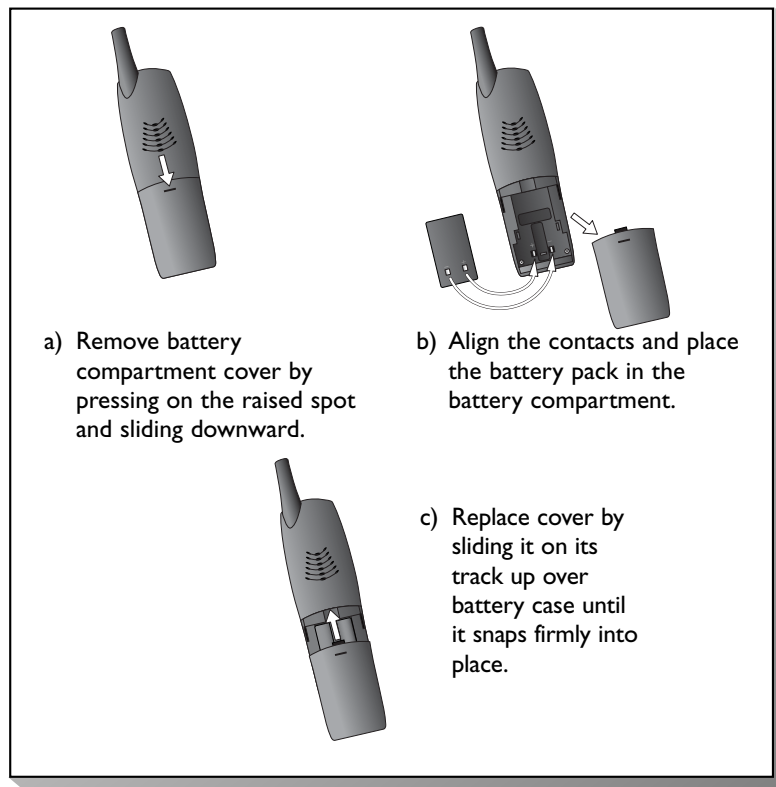

## IN CASE OF DIFFICULTY

If you have difficulty operating this phone, try the suggestions below. For Customer Service, visit our website at [www.telephones.att.com](http://www.telephones.att.com) or call 1-800-222-3111. Please retain your receipt as your proof of purchase.

### PHONE

#### PROBLEM

If the phone does not work at all, check these items first:

#### SOLUTION

- Make sure the power cord is plugged into the base and an electrical outlet not controlled by a wall switch.
- Make sure the telephone line cord is plugged firmly into the base unit and the telephone jack.
- Make sure the battery pack is installed correctly.

If the above suggestions do not solve the problem, try re-initializing the handset and base (see "To re-initialize the handset and base").

#### PROBLEM

**If you have no dial tone:**

#### SOLUTION

Check all the previous suggestions. If you still do not hear a dial tone, disconnect the phone and try another phone in the same jack. If there is no dial tone on that phone either, the problem is probably in your wiring or local service.

#### PROBLEM

If you hear 2 quick beeps when you try to use the handset:

#### SOLUTION

- The handset and base are not communicating properly. You might be out of range. Move closer to the base and try again.
- If moving closer to the base does not help, follow the directions "To re-initialize the handset and base."

## PHONE

### PROBLEM

To re-initialize the handset and base:

### SOLUTION

- 1 Disconnect the power to the base.
- 2 Remove spare battery pack (if installed).
- 3 Remove the handset battery pack.
- 4 Wait at least 15 seconds.
- 5 Insert the handset battery pack.
- 6 Connect the power to the base.

### PROBLEM

If you hear noise or interference when using the phone:

### SOLUTION

- You may be out of range. Move closer to the base.
- Household appliances plugged into the same circuit as the base can sometimes cause interference. Try moving the appliance or the base to another outlet.
- The layout of your home or office may be limiting the operating range. Try moving the base to another location, preferably on an upper floor.
- Using the handset near household appliances (microwaves, computers, televisions, stereos, etc.) can sometimes cause interference. Move away from appliances while using the handset.

IN CASE OF DIFFICULTY

## PHONE

### PROBLEM

If the phone does not ring when you receive a call:

### SOLUTION

- Make sure the ringer is on (see “Ringer Volume” on pages 12 and 20).
- Make sure the telephone line cord is connected firmly to the base and the telephone jack.
- Make sure the AC adapter is plugged firmly into an electrical outlet not controlled by a wall switch.
- You might be too far from the base; move closer.
- You might have too many extension phones on your telephone line to allow all of them to ring. Try unplugging some of them.

### PROBLEM

If your telephone misdials:

### SOLUTION

- If you have dial pulse (rotary) service, you’ll need to set the dial method to PULSE. Follow the instructions under “Dial Mode (TONE/PULSE)” in the FEATURE SETUP – BASE section of this manual.
- If you have touch tone service and you hear clicks while you are dialing, you’ll need to set the dial method to PULSE. Follow the instructions under “Dial Mode (TONE/PULSE)” in the FEATURE SETUP – BASE section of this manual.

### PROBLEM

If you are unable to operate special telephone services or other equipment requiring touch tone signals:

### SOLUTION

If you have dial pulse (rotary) service, follow the directions under “Temporary Tone Dialing” in the TELEPHONE OPERATION section of this manual.

IN CASE OF DIFFICULTY

## CALLER ID

### Problem

If the caller's name or phone number is not displayed:

### Solution

- Make sure you subscribe to Caller ID service from your local telephone company.
- Make sure the battery is charged.
- Caller ID service might not work when the phone is connected to a Private Branch Exchange (PBX).

## IN CASE OF DIFFICULTY

### Problem

If the caller's name or phone number is not displayed during Call Waiting:

### Solution

- You should call your service provider to confirm that you subscribe to combined Caller ID with Call Waiting service.
- Caller ID information received during Call Waiting is displayed only on the handset that is in use.
- Make sure the battery is charged.

## ANSWERING SYSTEM

### PROBLEM

If messages are incomplete:

### SOLUTION

- If a caller leaves a very long message, part of it may be lost when the system disconnects the call after four minutes.
- If the caller pauses for more than seven seconds, the system stops recording and disconnects the call.
- If the system's memory becomes full during a message, the system stops recording and disconnects the call.

---

### PROBLEM

If you have difficulty hearing messages:

### SOLUTION

Check the volume setting.

---

### PROBLEM

If callers are unable to leave messages in Mailbox 2 or 3:

### SOLUTION

Make sure caller is dialing from a touch tone phone.

---

### PROBLEM

If the system does not answer after the correct number of rings:

### SOLUTION

- Make sure that the answering system is on.
- If Toll Saver is on, the number of rings changes to two when you have new messages waiting.
- In some cases, the system may be affected by the ringing system used by the local telephone company.
- If the memory is full or the system is off, the system answers after 10 rings.

## ANSWERING SYSTEM

### Problem

If CL appears in the Message Window:

information.

### Solution

You need to reset the clock. The answering system clock is not set automatically with incoming Caller ID

### Problem

If the system does not respond to commands from a remote touch tone phone:

### Solution

- Make sure you are calling from a touch tone phone. When you dial a number, you should hear tones. If you hear clicks instead, the phone is not a touch tone telephone.
- The answering system may not detect the Remote Access Code while your announcement is playing. Try waiting until the announcement is over before entering the code.
- Make sure you enter your Remote Access Code correctly.
- There may be noise or interference on the phone line you are using. Press keys firmly.

### Problem

If your outgoing announcement isn't clear:

### Solution

- When you record your announcement, make sure you speak in a normal tone of voice, about nine inches from the base.
- Make sure there is no "background" noise (TV, music, etc.) while you are recording.

IN CASE OF DIFFICULTY

## DEFAULT SETTINGS

DEFAULT SETTINGS	
FUNCTION:	DEFAULT SETTING:
Dial Method	Tone
Handset Volume	2
Ringer Volume	3
Ringer Melody	1
Keypad Tone	ON
Clock Mode	ON
Vibrate	OFF
Remote Access Code	50
Message Alert	OFF
Announce Only	OFF
Number of Rings	4
Call Screening	ON

DEFAULT SETTINGS

## TECHNICAL SPECIFICATIONS

### TECHNICAL SPECIFICATIONS

RF Frequency Band (Handset to base)	2400 MHz – 2483.5 MHz
RF Frequency Band (Base to handset)	5725 MHz – 5850 MHz
Number of Channels	95
Channel Spacing	864 kHz
Handset Transmit Power	+23 dBm
Base Transmit Power	+29 dBm
Sensitivity	-93 dBm
Modulation	GFSK
Operating Temperature	0°C – 50°C
Base Unit Voltage (AC Voltage, 60Hz)	96 – 127 Vrms
Base Unit Voltage (DC Adapter Output)	7 Vdc @ 1000mA
Handset Voltage (2-Cell NiMH Battery)	2.0 – 3.0 Vdc, 1400mAh

DEFAULT SETTINGS

## INDEX

### #

# 21, 22

### \*

\* 22, 23

### A

ALL 42

### B

Base 1, 23, 28, 35, 36

Base lights 33

Base Ringer 21

Base unit. See Base

BASS BOOST 11

battery 32

Beeps 33

Belt Clip 8

### C

CALL ON HOLD 29

Call Waiting 2

Caller ID 2, 31, 43

CID 48, 49

CLEAR 37

CLOCK ENABLE 10

CLOCK MODE 10

conference call 37

CONTRAST 18

### D

default settings 1

DEL 42

Dial Mode 22

dial tone 4, 64

dialing options 49

Display Screen Messages 31

### E

EDIT 41, 42

EMPTY ( ) 32, 61

English 19

ENTRY HAS BEEN STORED! 38

### F

Feature Setup Menu 9

FIND 40-42, 46

FLASH 27

French 19

FULL ( ) 32

### H

Handset 1, 2, 8, 11, 23-25, 28, 32,  
34-37, 60, 63, 64, 69, 70

Handset battery. See battery

Handset Icons 32

Handset ringer 12, 14

Headset 10, 8-11

Hold 29, 32, 37

HOLD 29, 36

I

Idle Screen 9  
IN USE light 22, 34, 35  
**INTERCOM** 36  
Interference 65

K

KEYPAD TONE 17

L

language 19  
long tone 53  
low batt tone 15  
low battery 31, 61  
LOW BATTERY 61

M

**MEM** 41  
memos 56  
**MENU** 8  
Message Alert 54  
message window 55, 57  
Message Window Display 58  
messages 55  
messages are incomplete 68  
MICROPHONE MUTED 28  
MID BOOST 11  
mute 28  
**MUTE** 28

N

NAME 38  
**NAME** 41  
NATURAL BOOST 11  
NEW CALLS 43  
NiMH Battery pack 1  
noise or interference 65  
**NUMBER** 40

O

**OFF** 23, 25, 26, 35-37  
**OK** 8

P

**PHONE** 23, 25, 26, 35, 40, 49  
Power Cord 1, 3, 6-64  
Power Failure Backup 7  
PULSE 66

R

range limit 16  
range tone 16  
re-initialize 65  
**REDIAL** 26  
**REDIAL** 26  
RINGER #01 13  
Ringer Melody 13, 21  
RINGER MELODY 13  
Ringer Volume 12, 14, 20, 69  
RINGER VOLUME 12

## S

**SAVE** 9, 38, 41  
SET TIME 9  
sound quality settings 11  
**SOUND SELECT** 11  
Spanish 19  
Spare Battery 7, 61  
Speaker 24  
**SPEAKER** 23, 25, 26, 35, 36, 40, 49  
Speakerphone 11, 25  
standby time 61  
subscriber services 27

## T

talk time 61  
Talking Caller ID 44~47  
Technical Specifications 71  
Telephone line cord 1, 3  
**THIS** 42  
Time 10  
**\*TONE** 30  
Tone/Pulse 22  
touch tone 30  
TREBLE BOOST 11

## V

Vibrate 12, 14, 70  
VIBRATE CONTROL 14  
VOL ▲ 23, 20, 24  
VOL ▼ 23, 20, 24  
Volume 12, 24, 71

## X

**XFER** 36